

Get Started with Bounce Viewer [Android]

- These steps were written using Bounce Viewer - Android version 2.7.4 and later.
- For questions:
 - help@bounceimaging.com
 - francisco.aguilar@bounceimaging.com
 - fabian.zamora@bounceimaging.com


Before you begin

1. Make sure your camera is charged, using **ONLY** Bounce Imaging approved chargers (**not USB**). A steady red light will indicate the ball is charging properly and will turn off when charging is complete (make sure camera is OFF when charging).



Turn ON the Explorer Camera

1. Disconnect your camera from the charger. Find the power switch, opposite from the charger opening. Switch the power switch to **ON** (red).

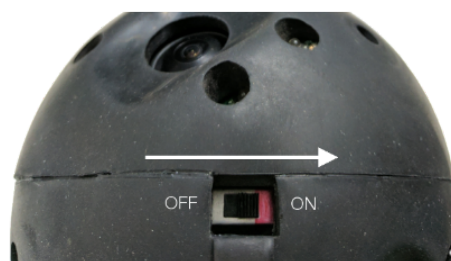


Add your camera

1. On the main screen tap on the **CONNECT** button.



2. Tap on the **Wi-Fi** tab.

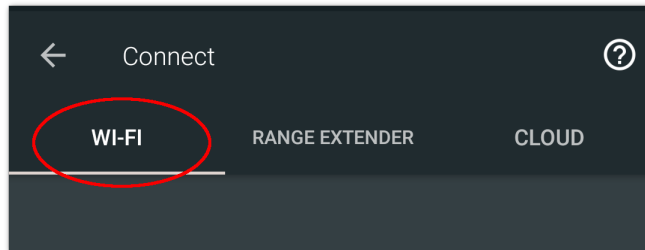

3. Click the **+** icon.



4. Scan the QR code located **under the lid of the case** by pressing the **SCAN** button. Then press **Save**.




Connect to a camera


1. On the main screen tap on the **CONNECT** button.



2. Tap on the **Wi-Fi** tab.

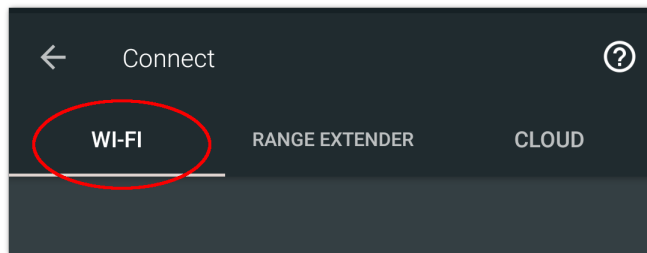

3. Tap the camera you want to use to and click **Connect**. You can also edit its name, rescan the code, share or delete it.

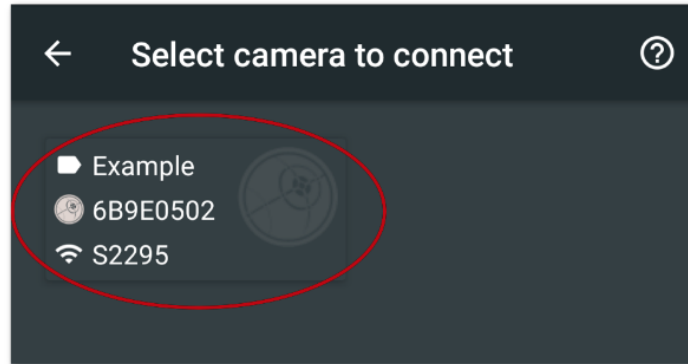

4. The app will now connect automatically to the camera's WiFi and start receiving video.

If your device keeps disconnecting

Make sure the Battery Saver Mode of your Android device is turned **OFF**. If the problem persists, please contact us at help@bounceimaging.com.

